



UTV  
**ZILLA™**

# Can-Am Commander 4 Seat Aluminum Roof


SKU: ZL-COM-RF-4-AL

For: Can-Am Commander and Maverick Sport


IMPORTANT: Please read through all instructions before installing. Thank you.

## Hardware:

<u>QTY</u>	<u>Description</u>
4x	1.75" Rubber Coated Clamps
4x	Hook Clamps Blk
14x	¼-20 Thin Locknuts
4x	Split Lock Washers Blk
6x	¼-20 5/8" Bolts Blk
4x	¼-20 3/4" Bolts Blk
2x	¼-20 1" Bolts Blk
4x	¼-20 1 1/4" Bolts Blk
2x	¼-20 1 1/2" Bolts Blk
32x	Flat Washers Blk
275"	1/8" x 1/2" Adhesive Foam

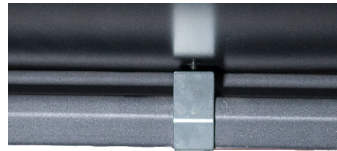

Hook clamp

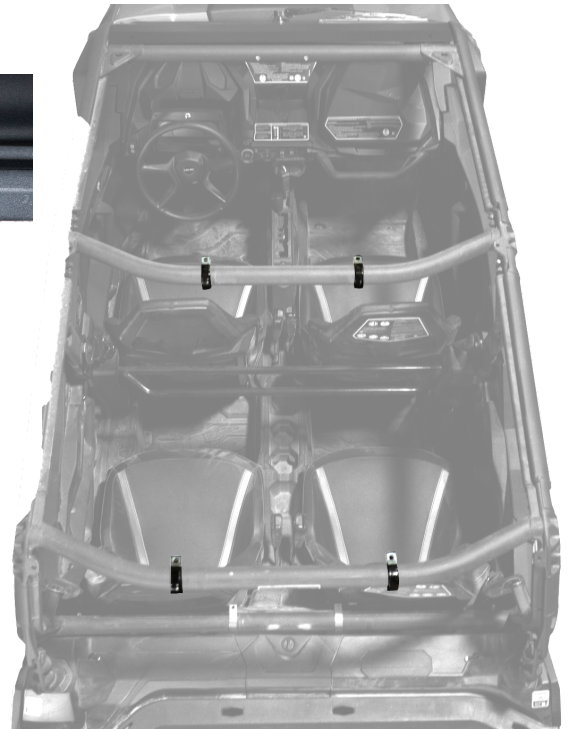

**Step 1:** Lay the roof out on a surface that will not scratch the roof. Use 4x ¼-20 5/8" bolts, 4x ¼-20 thin locknuts, and 8x washers to attach the front and back roof together, make sure that the front piece is on top of the back piece to allow the roof to fit better. Make sure to put the bolts on the top for a cleaner look. Do not tighten the bolts yet, the roof may need to adjust to be able to fit properly on your machine.

**Step 2:** On the bottom side of the roof, apply adhesive foam along the sides from the front to the back (shown on picture on the back of the paper in purple). Apply foam directly to the top of the crossbars anywhere the roof will contact the crossbars, this can be applied to the roof instead of the crossbars but it is much more difficult to get the foam in the correct position.

**Step 3:** Place the roof on your machine, we recommend having at least two people for this step. Line up all the holes and begin to thread in the bolts into the spots shown in the picture (back of paper). You will need washers on every bolt. Once all bolts are threaded tighten all of the bolts.

# Front

**¼-20 5/8" bolts**

**¼-20 ¾" bolts**

**¼-20 1" bolts**

**¼-20 1 ¼" bolts**

**¼-20 1 ½" bolts**

**Adhesive foam**

Note: The holes circled in black will get the hook clamps.

The holes circled in green will get the rubber coated clamps.

