



Instructions KRX Aluminum Roof 2 Seat

Read through all instructions before install.


1/4" x 3/4" Bolts (BSS) – 4

1/4" x 20" Lock Nuts (SS) – 4

1/4" Flat Washers (BSS) – 8

Adhesive Foam – 156"

STEP ONE – Put the adhesive foam on the roof where the roof will rest on the cage.

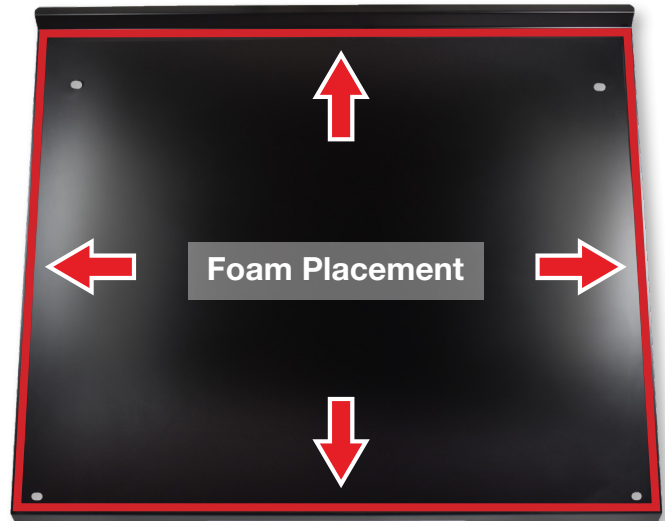

STEP TWO – Place the roof in place and use the bolts to attach to the holes in the cage. Use a washer on each side and tighten the nuts.