




Instructions Polaris RS1

Install windshield wiper if applicable. There is another instruction sheet for wiper install.

- 4 – Universal Billet Clamp 1.75"
- 4 – Bolt $\frac{1}{4}$ -20 \times 2"
- 4 – Bolt $\frac{1}{4}$ -20 \times $\frac{1}{2}$ "
- 4 – Bolt 10/24 \times $\frac{1}{2}$ "
- 4 – Locknut 10/24
- 4 – Flat Washer $\frac{1}{4}$ "
- 1 – Handle Assembly
- 1 – $\frac{3}{8}$ " \times $\frac{1}{2}$ Adhesive Foam (21")
- 4 – Lock Washer

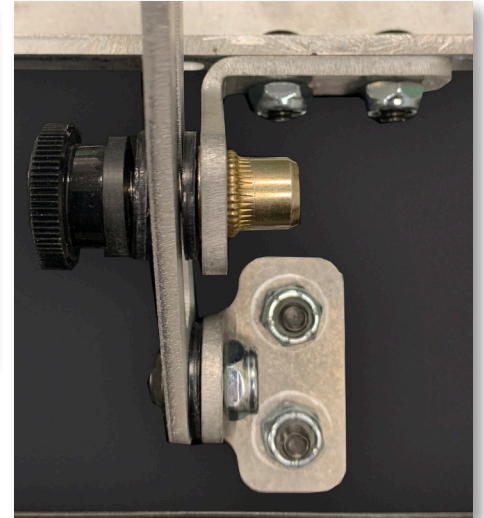

STEP ONE – Optional Roof Seal: Remove the backing to the adhesive foam and put it along the top forward facing edge as seen in the picture.

STEP TWO – Mount the bracket with threaded insert on the bent flange at the bottom of the windshield. Start the 10-24 bolts and nuts but don't tighten. Leave the bracket loose to align the handle later. The bracket will be on the right side of the windshield if you are sitting in the machine.

STEP THREE – Bolt the handle assembly to the flap and adjust the bracket with insert to keep the handle parallel and spaced evenly between the faces of the two parts. Tighten the loose bolts on the bracket.



Foam Placement

STEP FOUR – Place the billet clamps on the frame in the approximate locations and tighten with the 2" bolts enough to hold in place but still allow slight movement. Bolt the windshield to the clamps using the $\frac{1}{2}$ " bolts and flat washers. Adjust windshield to desired location and tighten all the bolts.



Upper Clamp Orientation