

UTV ZILLA™

Instructions Polaris 2019+ RZR 1000 / Turbo S

4 – Universal Billet Clamp 1.75”

4 – Bolt 1/4-20 × 2.5”


4 – Flat Washer 1/4”

4 – Bolt 10/24 × 1/2”

4 – Lock Nut 10/24

1 – Handle Assembly

4 – Lock Washer

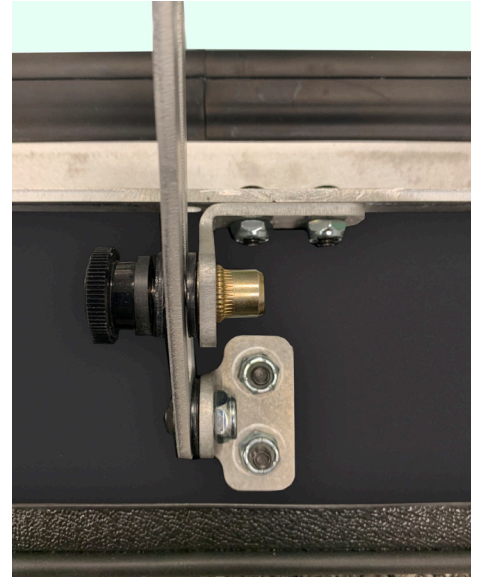

STEP ONE – Using the Handle Assembly bolt the Flap Mount on the inside of the polycarbonate as seen in the picture using 2 10-24 bolts and lock nuts. Tighten bolts. Mount the bracket with threaded insert on the right two holes of bottom brace using the other two 10-24 bolts and nuts.

Install windshield wiper before next step if applicable. There is another instruction sheet for wiper install.



STEP TWO – Place the billet clamps on the frame with the clamp orientation shown in the picture. The flat face of the clamp should face forward and the clamp opening pointed towards the center of the machine. Use a 2.5” bolt with a washer to secure windshield to clamps. Adjust windshield to desired location and then tighten all the bolts.