


UTV ZILLA™

Instructions Polaris RZR Pro XP

- 4 – Universal Billet Clamp 2"
- 4 – Bolt 1/4-20 x 2.5"
- 4 – Flat Washer 1/4"
- 4 – Lock Washer 1/4"
- 8 – Locknuts 10-24
- 8 – Bolts 10-24 x 1/2"
- 1 – 1/2" Adhesive Foam x 40"
- 1 – Long Handle Assembly Right
- 1 – Long Handle Assembly Left

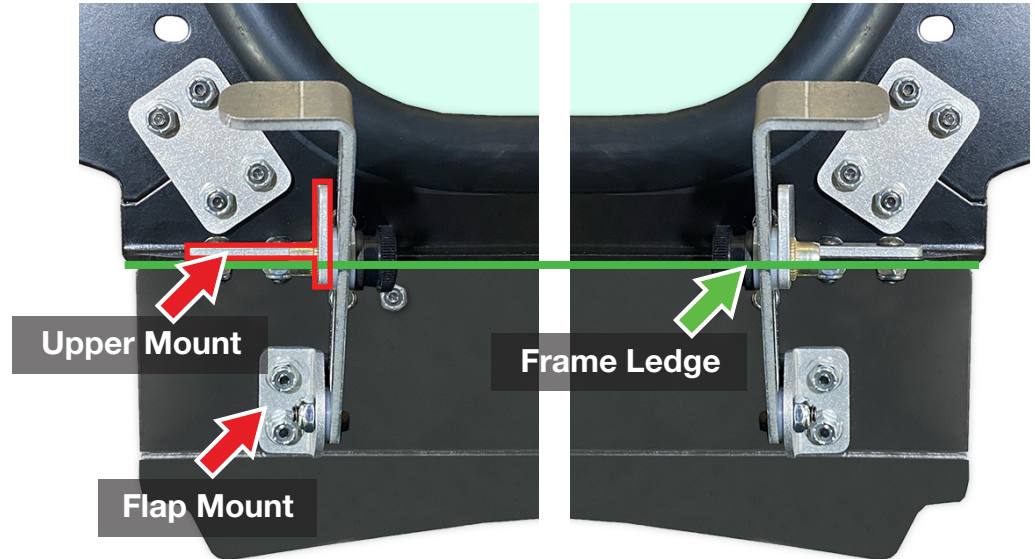

STEP ONE – (Order of operation is important for alignment) Using the Handle Assemblies, first, bolt the Flap Mounts on the inside of the polycarbonate as seen in the picture using two 10-24 bolts and lock-nuts and finish tighten bolts. Mount the Upper Brackets **ON THE TOP** of the frame ledge using the other two 10-24 bolts and nuts. There is room for adjustment if you would like to adjust the vents.

Install windshield wiper before next step if applicable. There is another instruction sheet for wiper install.

STEP TWO – Place the clamps on the roll cage in the approximate locations. The flat face of the clamp should face forward and the clamp opening pointed towards the center of the machine.



Clamp Orientation

PRO TIPS

Optional: Remove the backing to the 1/2" Adhesive Foam and put it on the front top most edge of the windshield. This will fill the area between the roof and the top of the windshield where they come in contact. Be extremely precise where you apply the foam the adhesive is permanent and will not release.