

# UTV ZILLA™

## Instructions Glass Windshield Wildcat XX

Install windshield wiper if applicable. There is another instruction sheet for wiper install.


**4** – Rubber Coated Clamp 1.75”

**4** – Bolt 1/4-20 x 1.25”

**4** – Locknut 1/4”

**8** – Flat Washers 1/4”

**1** – 1/8” Rubber Trim (17”)

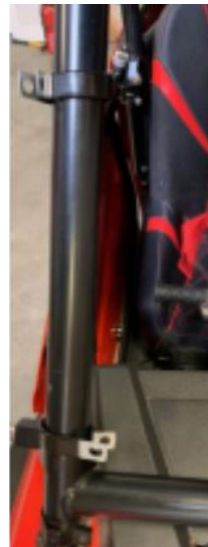

**STEP ONE** – Place bar clamps on the frame in approximate locations. The bottom clamps point towards the center and the top clamps point forward.

**STEP TWO** – Center windshield on the machine allowing it to rest the rubber trimmed edges on the plastic. Bolt the windshield to the bar clamps by putting a flat washer on each bolt before inserting through the holes. Place another washer on the opposite side of the clamp and a lock nut. Tighten until firmly in place.